

IMPORTANT SAFEGUARDS & TECHNIQUES

When using any electrical appliance, basic safety precautions should always be followed, including the following:


1. READ ALL INSTRUCTIONS BEFORE USING YOUR COTTON CANDY MACHINE.
2. To protect against the risk of electrical shock, DO NOT put the unit in water or other liquids.
3. Keep all spectators at a reasonable distance, and use a floss bubble dome for added customer protection. Close supervision is needed when being used near children.
4. Unplug from the electric outlet when not in use, before servicing, maintenance, or cleaning.
5. Avoid any contact with moving parts using body parts or utensils. Keep jewelry, long hair, hands, and face clear of the floss head to avoid possible injury.
6. Do NOT operate the cotton candy machine if damaged or malfunctioning in any manner.
7. It may cause injury to use any accessory or attachment not provided or recommended by your rental provider.
8. Always position the appliance close to a power outlet to avoid tripping over the power cord. Do NOT leave the power cord hanging over the edge of a table or counter or come in contact with any hot surfaces.
9. Check the floss head and bowl for the presence of foreign objects before using.
10. Do NOT place the unit on or near a hot gas or electric burner or in a heated oven.
11. Turn ALL switches to the "OFF" position before disconnecting the power plug from the wall supply outlet.
12. Do NOT allow the spinning head to run for long periods of time without floss.
13. KEEP OUT OF REACH OF CHILDREN.
14. NEVER LEAVE UNATTENDED WHILE IN USE.
15. NEVER FORCE ANY PARTS OR BRACKETS INTO POSITION.

ELECTRICAL REQUIREMENTS

The following power supply must be provided:

- Voltage: 120 volt, 60 cycle, single phase, 15 amp circuit.
- Input Power: 1100W

This appliance is equipped with a 3-prong conductor cord and a 3-prong grounding-type plug to fit the proper grounding-type receptacle.

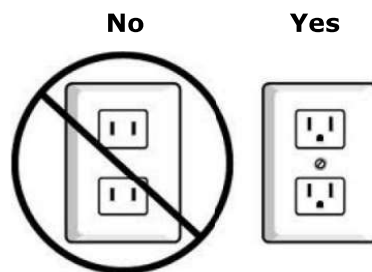

We recommend this appliance be on a dedicated and protected circuit.

Only use 3-wire extension cords which have 3-prong grounding-type plugs.

OPERATING PROCEDURES

⚠ WARNING: Floss Head rotates at 2000 rpm. Operator MUST keep Jewelry, long hair, hands and face clear of the floss head to avoid possible injury. Keep all spectators at a reasonable distance, and use a floss bubble for added customer protection.


1. Make sure the Cotton Candy Machine is unplugged before you do any of the following:
2. Make sure that you have chosen a safe location for operation and that you place it on a stable, sturdy surface. This machine operates at high speeds. STABILITY IS ESSENTIAL FOR SAFETY.
3. The cotton candy Machine has 2 controls:
Motor and master switch - Turns the motor "ON" & "OFF"
Heat Switch - Supplies current to the heating rotating head.
4. Make sure that the pan is locked into place using the clamping brackets.
5. Now you can plug in the power cord of the cotton candy machine.
6. Turn the Motor and Master switch on and allow the unit to run for 1 or 2 minutes. Observe the Stability of your machine. Check for excessive vibration and if you notice this, turn the power switch off, unplug the machine and make sure that your working surface is level.
7. Turn the Heating control ON and allow heating for 4-5 minutes.
8. After the machine is Hot, Turn off the spinner Head; add 1 scoop (with the sugar scoop provided) of cotton candy floss mixture into the spinning head. DO NOT OVERFILL. OVERFILLING CAN LEAD TO EXCESSIVE SMOKE AND DAMAGE TO THE MACHINE.
9. Within 30-45 seconds, cotton candy floss will appear. Make sure to spin the floss head until all the sugar is gone. **Very important! failure to burn off and spin off excess sugar could lead to smoking and/or burned sugar during the next run cycle.** Repeat these steps to continue spinning floss. For every hour of continuous use, turn off and rest the machine for 20 minutes.

MAKING FLOSS

⚠ CAUTION: Operator must keep jewelry, long hair, hands and face clear of the floss head to avoid possible injury.

- Pick a cone; if it sticks in the stack of cones, twist it off the stack.
- Hold an inch or two of the pointed end of the cone between two fingers and thumb. With a light flicking action, roll in the web of floss building up in the pan. Lift the cone up with the ring of floss attached and rotate the cone to wrap the floss. Do not roll floss while the cone is inside the pan. This will pack the floss too tightly.
- If the floss fails to stick to the cone, pass the cone near the spinner head to pick up a starter of melted sugar. Lift the cone out of the pan and wrap the floss with a "figure eight" movement of the hand. Make sure room humidity is not too high, or product will be heavy.

Grip the cone as shown in the image below, then break the web of floss with the cone. Wind the sugar around the cone and finally, roll the floss onto the cone.

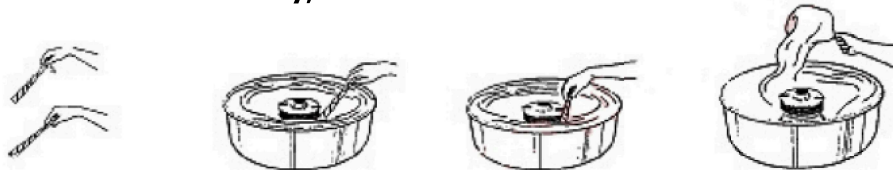

- DO NOT PUT HANDS OR OBJECTS IN ROTATING SPINNER HEAD.
- DO NOT FILL SPINNER HEAD WITH SUGAR WHILE IT IS ROTATING.
- WEAR EYE PROTECTION.
- DO NOT PUT HANDS NEAR ROTATING SPINNER HEAD.
- USE FLOSS CONE TO COLLECT COTTON CANDY.