


# Owner's Manual & Instructions

**OSCAR 8OZ**  
**71300,71301,71310,**  
**71350,71360**

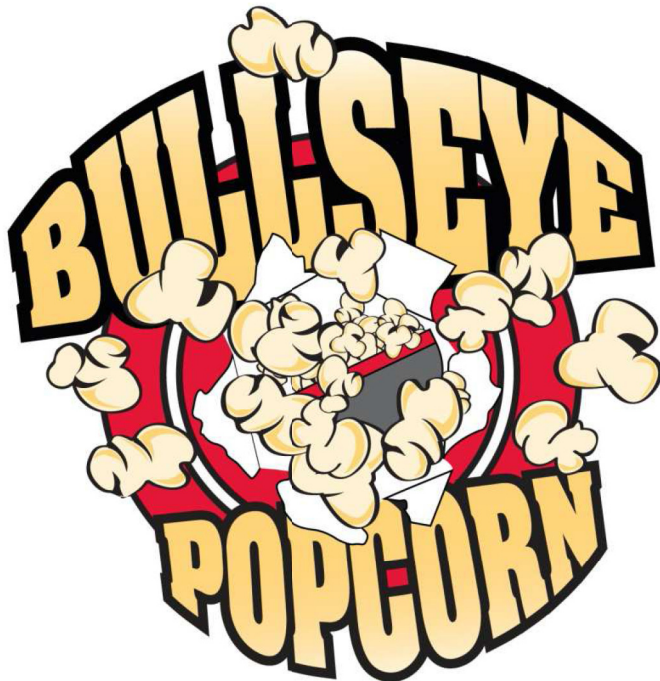


**ALWAYS READ**

**ALL INSTRUCTIONS BEFORE USING**

## **IMPORTANT SAFEGUARDS**

*When using any electrical appliance, basic safety precautions should always be followed, including the following:*

1. **READ ALL INSTRUCTIONS BEFORE USING YOUR POPCORN MACHINE.**
2. Always make sure the popcorn maker is set on a flat and level surface before operating.
3. Keep door closed while operating. Kettle surface is HOT and should NOT be touched during popping or immediately after use.
4. Do not touch hot surfaces. Always use handles or knobs to operate.
5. Allow HOT parts to cool down before moving.
6. To avoid any risk of electrical shock, do not immerse cord or plug into water or other liquid.
7. Close supervision is necessary when it is being used by or near children.
8. Unplug main power cord from outlet while not in use and before cleaning, and store in a dry and safe place if not being used for a long time.
9. DO NOT operate the appliance with damaged cord or plug, malfunction or with any mechanical damages. Send the unit to the nearest authorized service center for examination and repairs. (ONLY technicians are to open up the unit)
10. It may cause injury by using any accessory or attachment not provided or recommended by manufacturer.
11. To avoid overheating, always add oil and then kernels before operating. Do not pop kernels with a dry pot (without oil).
12. Do not immerse popping kettle set into water.
13. Do not place the unit on or near a hot gas or electric burner or in a heated oven.
14. Extreme caution must be paid when moving the appliance containing hot oil or other hot liquids.
15. Always connect the plug to the popping kettle first, and then the main power cord into the wall outlet.
16. Turn ALL switches to "OFF" position before disconnecting power plug from the wall supply outlet.
17. Always position appliance close to a power outlet to avoid tripping over power cord. Do not leave power cord hanging over edge of table or counter or come in contact with any hot surfaces.

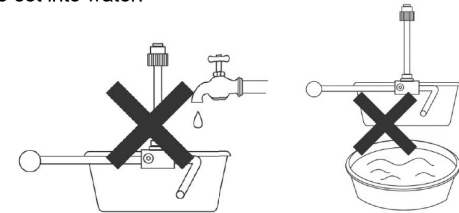

## OPERATING PROCEDURE

- 1) Make sure the popcorn maker is unplugged before you do any of the following.
- 2) Popcorn Maker is rated at 120 volt. Only plug unit into 120 volt power source to avoid potential damage to unit.
- 3) Clean the internal surface of the kettle pot and main unit surfaces. (see Cleaning procedure page 11).
- 4) **The 8 oz unit has 3 function switches as follows:**



Spot light and warmer (1)      Stirrer (2)      Stainless steel Pot heater(3)

- 5) Secure the kettle onto the hanger of the main unit.
- 6) Now you can plug in the power cord to the popcorn maker.
- 7) Switch on the light and heater (1 & 3) and fill the kettle with the correct amount of oil based on popping chart in Figure 5 or the portion of oil into of bullseye portion pak. **Do not use butter inside the kettle.** Kettle should be pre-heated for 3 to 4 minutes with oil (until steam rises from the pot).
- 8) Empty the popcorn section of our Bullseys Popcorn portion pak or measure out corresponding amount of plain popcorn kernels from the chart in Figure 5. Lift the lid and then pour in the kernels carefully. (Fig. 2) **Caution: Lid will be HOT!**
- 9) Switch ON the Stirrer switch (2). (Fig. 3)
- 10) Shut the door carefully.
- 11) Popcorn starts popping out through the lid after about 2 to 3 minutes.
- 12) Switch OFF the stirrer & heater switches (2 & 3) when popping is complete (No more popping sounds from the pot).
- 13) Rotate handle on kettle counter clockwise to pour out all remaining popcorn from kettle. **CAUTION: Kettle is HOT!**
- 14) Keep heater switch (3) OFF if the unit is not being continuously used.
- 15) Serve your popcorn with popcorn scoop provided.
- 16) Remove plug from power supply if the unit is not being used for a long period of time.
- 17) Repeat step 7 to 12 for continuous popping.

**Figure 5**

OIL	POPCORN
1 Tbsp	½ t cup
2 Tbsp	1 cup

***Do not exceed 1 cup per batch***

18. Not recommended for use outdoors.
19. Do not use appliance for other than indicated usage.
20. The popping kettle should NOT be connected to ANY electrical cord not included in this unit.
21. Extreme caution must be paid when emptying popcorn from the kettle to avoid burns from the kettle or from residual oil
22. KEEP OUT OF REACH OF CHILDREN.
23. DO NOT CLEAN USING ANY ABRASIVE MATERIAL.
24. NEVER LEAVE UNATTENDED WHILE IN USE.
25. NEVER FORCE ANY PARTS OR BRACKETS INTO POSITION.
26. NO PARTS ARE INTENDED FOR THE DISHWASHER.

# SAVE THESE INSTRUCTIONS