


IMPORTANT SAFEGUARDS

When using any electrical appliance, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS BEFORE USING THIS POPCORN MACHINE.
2. Always make sure the popcorn maker is set on a flat and level surface before operating.
3. Keep the door closed while operating. The kettle surface is HOT and should NOT be touched during popping or immediately after use.
4. Do not touch hot surfaces. Always use handles or knobs to operate.
5. Allow HOT parts or oil to cool down before moving.
6. To avoid any risk of electrical shock, do not immerse the cord or plug into water or other liquid.
7. Close supervision is necessary when it is being used near children.
8. Unplug the main power cord from the outlet while not in use and before cleaning. Store in a dry and safe place if not being used for a long time.
9. DO NOT operate the appliance with a damaged cord or plug, malfunction or with any mechanical damages.
10. It may cause injury by using any accessory or attachment not provided or recommended by the manufacturer or supplied by your rental provider.
11. To avoid overheating, always add oil and then kernels before operating. Do not pop kernels with a dry pot (without oil).
12. Do not immerse the popping kettle in water.

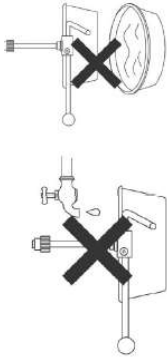

13. Do not place the unit on or near a hot gas or electric burner or in a heated oven.
14. Always connect the plug to the popping kettle first, and then the main power cord to the wall outlet.
15. Turn ALL switches to "OFF" position before disconnecting the power plug from the wall supply outlet.
16. Always position the appliance close to a power outlet to avoid tripping over power cord. Do not leave the power cord hanging over the edge of the table or counter or come in contact with any hot surfaces.
17. Not recommended for use outdoors.
18. Do not use the appliance for other than indicated usage.
19. The popping kettle should NOT be connected to ANY electrical cord not included in this unit.
20. Extreme caution must be paid when emptying popcorn from the kettle to avoid burns from the kettle or residual oil.
21. **KEEP OUT OF REACH OF CHILDREN.**
22. **DO NOT ATTEMPT CLEANING THE APPLIANCE AFTER USE. THE CLEANING FEE IS INCLUDED IN THE RENTAL RATE.**
23. **NEVER LEAVE UNATTENDED WHILE IN USE.**
24. **NEVER FORCE ANY PARTS OR BRACKETS INTO POSITION.**

OPERATING PROCEDURE

1. Make sure the popcorn maker is unplugged before you do any of the following.
2. Popcorn Maker is rated at 120 volts. Only plug the unit into a 120-volt power source to avoid potential damage to the unit.
3. The 8 oz unit has 3 function switches as follows:



Spot light and warmer (1)



Stirrer (2)



Stainless steel Pot heater (3)

4. Secure the kettle onto the hanger of the main unit.
5. Now you can plug in the power cord to the popcorn maker.
6. Switch on the light and heater (1 & 3) and fill the kettle with the correct amount of oil based on the popping chart in Figure 4 or the portion of the oil from the bullseye portion pak. **Do not use butter inside the kettle.** The kettle should be pre-heated for 3 to 4 minutes with oil until steam rises from the pot.
7. Empty the popcorn section of our Bullseye Popcorn portion pak or measure out the corresponding amount of plain popcorn kernels from the chart in Figure 4. Lift the lid and then pour in the kernels carefully. **CAUTION: The lid will be HOT!**
8. Switch ON the Stirrer switch (2).
9. Shut the door carefully.
10. Popcorn starts popping out through the lid after about 2 to 3 minutes.
11. Switch OFF the stirrer & heater switches (2 & 3) when popping is complete (No more popping sounds from the pot).
12. Rotate the handle on the kettle counterclockwise to pour out all remaining popcorn from the kettle. **CAUTION: The kettle is HOT!**
13. Keep the heater switch (3) OFF if the unit is not being continuously used.
14. Serve your popcorn with the popcorn scoop provided.
15. Remove the plug from the power supply if the unit is not being used for a long period..
16. Repeat steps 6 to 11 for continuous popping.

Figure 4

DO NOT EXCEED 1 CUP PER BATCH

| POPCORN | OIL |
|---------|--------|
| 1/2 cup | 1 Tbsp |
| 1 cup | 2 Tbsp |